

**U2-K H.265 DNN  
Rugged Bullet IP Camera**

**User's Manual**

Ver. 1.2

# Table of Contents

<b>1. Overview</b>	<b>2</b>
1.1 Features	2
1.2 Package Contents	3
1.3 Dimensions	4
1.4 microSD Card Slot / Factory Default Button	5
<b>2. Camera Cabling</b>	<b>7</b>
2.1 All-in-One Cable	7
2.2 Connect Power	8
2.3 Connect Ethernet Cable	8
2.4 Connect Alarm I/O	8
2.5 Waterproof Cable Connectors	9
<b>3. Installation</b>	<b>10</b>
3.1 Ceiling / Wall Mounting	10
<b>4. System Requirements</b>	<b>13</b>
<b>5. Access Camera</b>	<b>14</b>
<b>6. Setup Video Resolution</b>	<b>17</b>
<b>7. Configuration Files Export / Import</b>	<b>18</b>
<b>8. Tech Support Information</b>	<b>19</b>
8.1 Delete the Existing DCViewer	19
8.2 Setup Internet Security	20

# 1. Overview

U series security camera line uses newest Deep Neural Network technology (DNN) and the hardware accelerated engine benefit from SoC to provide professional-level functions such as multiple object recognition, face detection and recognition, license plate recognition, etc.








The camera is designed to withstand ever-changing outdoor environment and is compliant with IP66 & IK10 standard. It is equipped with IR LED with an effective distance of up to 40 meters to ensure its usability under poor lighting condition. The camera operating temperature ranges from -55°C to 55°C.

## 1.1 Features

- Progressive scan CMOS image sensor support up to 8M Resolution
- Multi Exposure HDR
- Multi Codec support (H.265/ H.264/ MJPEG)
- Quad Streams support
- True Day/Night function (ICR)
- IR LED (working distance up to 40m)
- 3D Motion Compensated Noise Reduction
- Deep Neural Network Accelerated Engine-  
Face/LPR Detection and Recognition/ Object Classification and  
Recognition/ People Counting and Tracking
- Smart Event function-  
External Input/ Motion Detection/ Network Failure Detection/  
Tampering Alarm/ Periodical Event/ Manual Trigger/ Audio Detection
- Micro SD/ SDHC/ SDXC Card support
- ONVIF Profile S/ G/ T/ M Support
- Weatherproof (IP66)
- Vandal Proof (IK10 Rating)

## 1.2 Package Contents

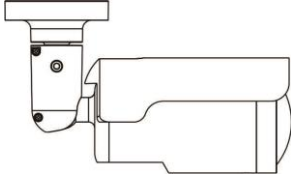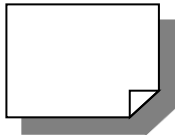Please check the package containing the following items listed below.

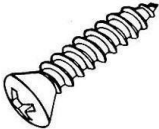
 U2-K H.265 DNN Rugged Bullet IP Camera (cable included)	
 5-Pin Alarm Terminal Block	 Quick Guide
 Plastic Screw Anchor (x5)	 2-Pin Power Terminal Block
 M4 Self-Tapping Screw (x5)	 Security Torx



**NOTE:** The product is intended to be supplied by a UL Listed Power Unit marked "L.P.S." (or "Limited Power Source") and is rated 1) 12Vdc, 1.37A min. (supplied by power adaptor), 2) 24Vac, 50/60Hz, 1.06A min. (supplied by power adaptor), or 3) 48Vdc, 0.27A min. (supplied by PoE), Tma = 55 degree C. If further assistance with purchasing the power source is needed, please contact DynaColor, Inc.




**NOTE:** The supplied self-tapping screws are for soft substances / materials such as wood. For other installation environments such as cement wall, users **MUST** pre-drill and use plastic anchors before fastening the supplied self-tapping screws on the wall.

 **NOTE:** Do not replace batteries of the camera. Risk of explosion may occur if the battery is replaced by an incorrect type.

### 1.3 Dimensions

The dimensions of the camera are shown below.

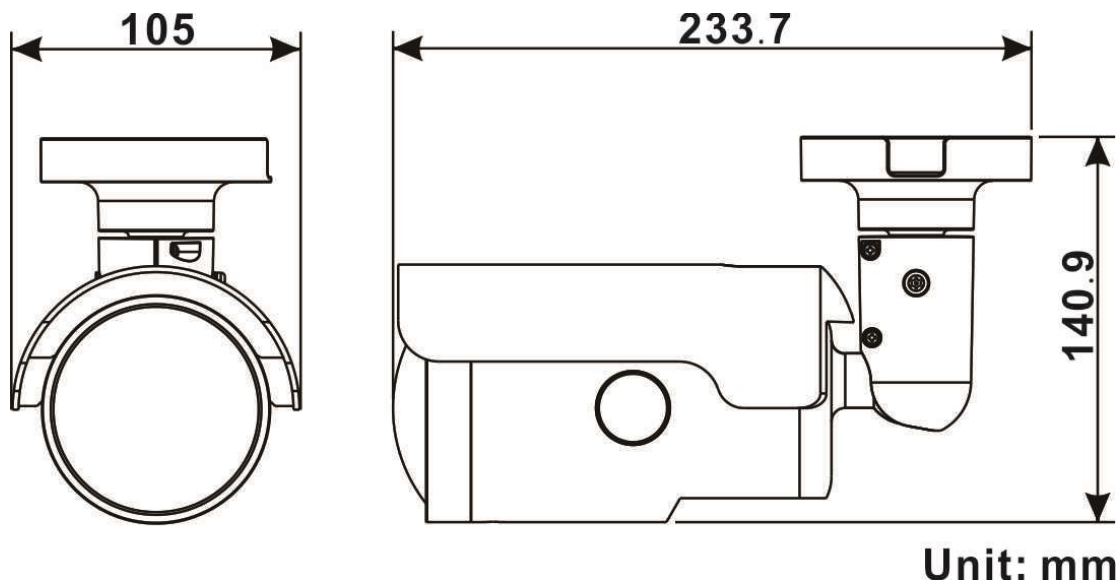


## 1.4 microSD Card Slot / Factory Default Button

The camera's microSD card slot and factory default button are inside the front housing. If users need to use them, the front housing must be opened. Follow the steps below to reach microSD card slot and factory default button.


### Step 1:

Open up the external cover using a flathead screwdriver.

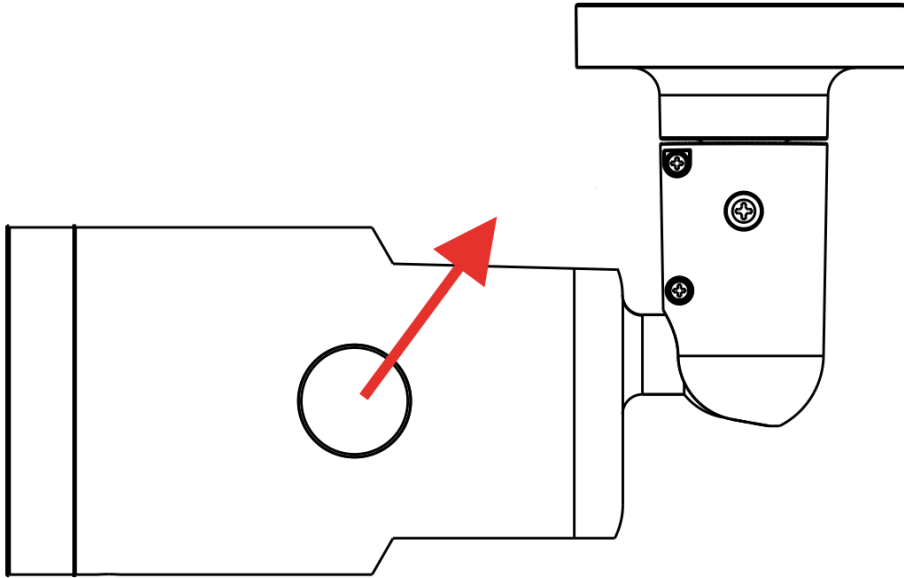


### Step 2:

Open up the internal cover using a security torx.

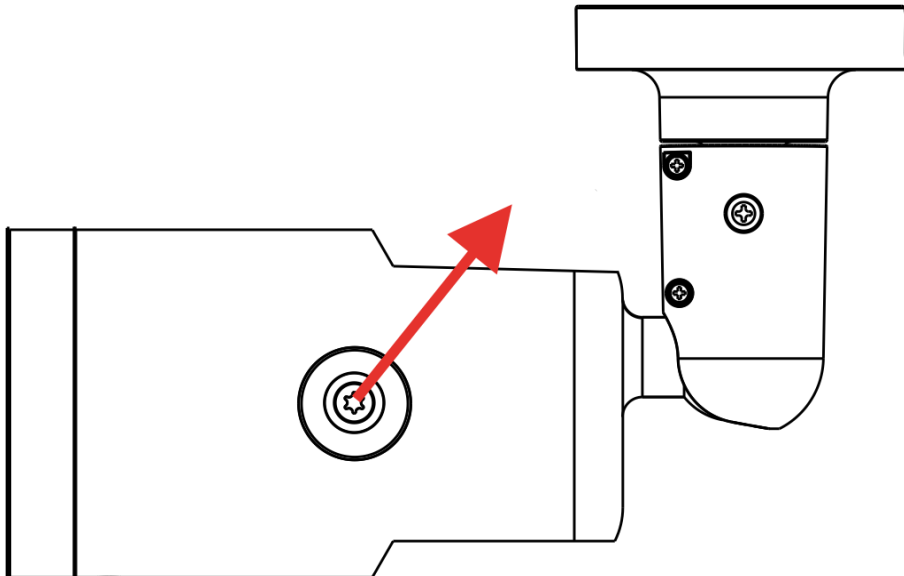

The positions of microSD card slot and default button are as shown below.

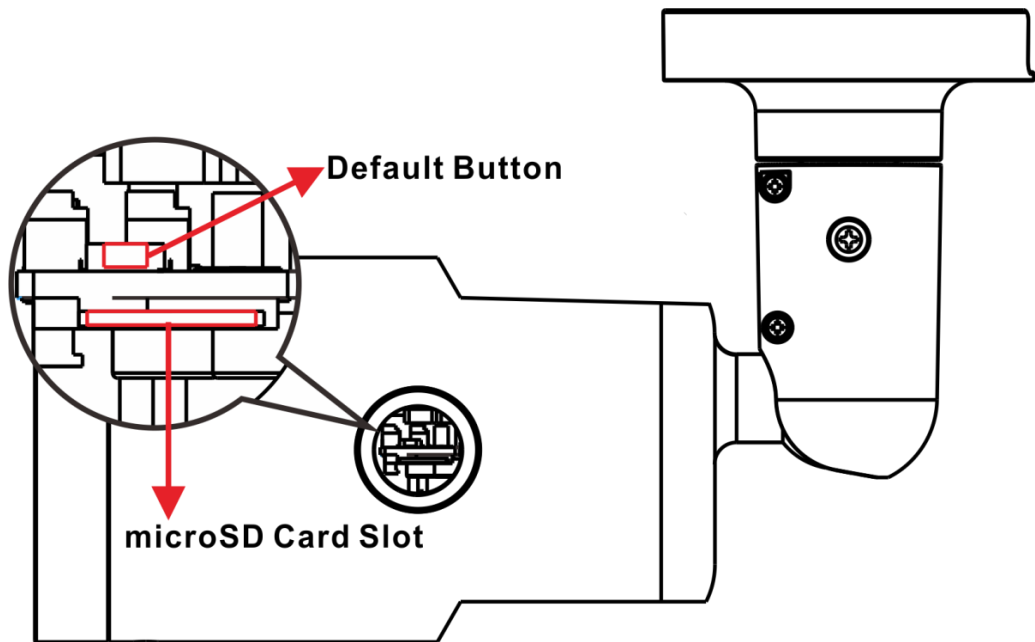


**NOTE:** It is not recommended to record with the microSD card for 24/7 continuously, as it may not be able to support long term continuous data read/write. Please contact the manufacturer of the microSD card for information regarding the reliability and life expectancy.

## 2. Camera Cabling

Before users connect cables, make sure that all cables and the power adaptor are placed in dry and well-waterproofed environments, e.g. waterproof boxes. The purpose is to prevent moisture accumulation inside the camera and moisture penetration into cables, which might lead to camera breakdown. Please refer to the following sections to complete camera connection.

### 2.1 All-in-One Cable

The diagram below shows the All-in-One cable of the camera. Definition for each cable is also given as follows.

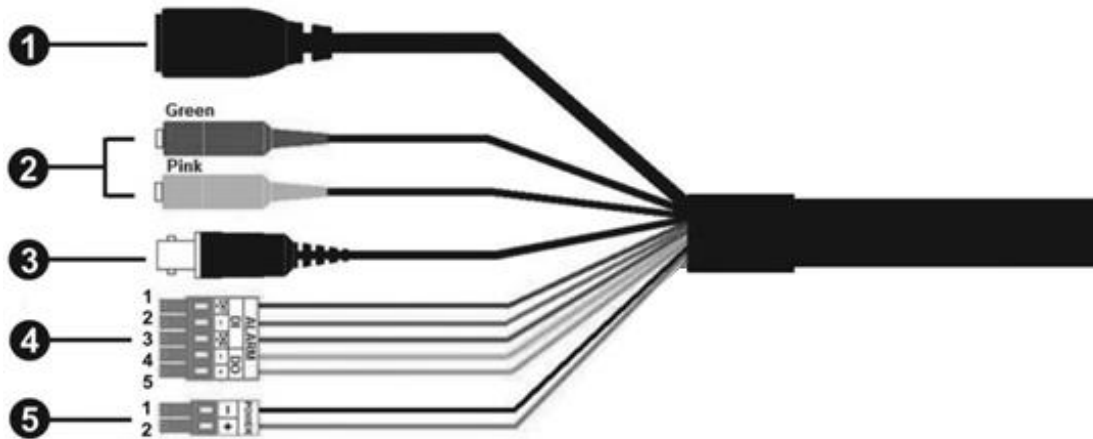

No	Cable	Pin	Definition	Remarks	
1	RJ-45	-	For network and PoE connections		
2	Audio I/O	Green	Audio Out / Mic Out (Line Out)	Two-way audio transmission	
		Pink	Audio In / Mic In (Line In)		
3	BNC*	-	For analog video output		
4	Alarm I/O (5-pin Terminal Block)	1	Alarm In 2+	#Do <b>NOT</b> connect external power supply to the alarm I/O connector of the IP camera.	
		2	Alarm In -		
		3	Alarm In 1+		
		4	Alarm Out -		
		5	Alarm Out +		
5	Power (DC 12V / AC 24V) (2-pin Terminal Block)	1	DC 12V -	AC 24V 1	Power connection
		2	DC 12V +	AC 24V 2	

(\*) Optional



## 2.2 Connect Power

For power connection, please use an AC 24V / DC 12V adaptor and connect it to the 2-pin terminal block of the All-in-One cable and the power outlet. Alternatively, users can power the camera by PoE if a Power Sourcing Equipment (PSE) switch is available. Please refer to the section below for Ethernet cable connection.



**NOTE:** If the device is powered over Ethernet, make sure the PSE is connected to the network.


## 2.3 Connect Ethernet Cable

To have the best transmission quality, cable length shall not exceed 100 meters. Connect one end of the Ethernet cable to the RJ-45 connector of the All-in-One cable, and plug the other end of the cable to the network switch or PC.



**NOTE:** In some cases, Ethernet crossover cable might be needed when connecting the camera directly to the PC.

Check the status of the link indicator and the activity indicator LEDs. If the LEDs are unlit, please check the LAN connection.



Green Link Light indicates good network connection.

Orange Activity Light flashes for network activity indication.

## 2.4 Connect Alarm I/O


For alarm I/O connection, please connect alarm devices to the 5-pin terminal block of the All-in-One cable.

## 2.5 Waterproof Cable Connectors

Follow the steps below to waterproof the connectors of the All-in-One cable.


### Step 1:

Connect the required devices to the All-in-One cable and coat the joints with silicone gel. There should be no gap between the connectors and the cables. For alarm I/O connector and power connector, make sure the side with wires attached is also sealed with silicone gel.

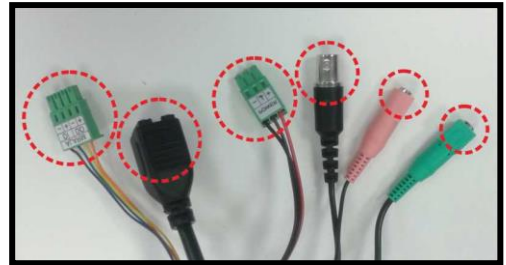

### Step 2:

Seal the end of the rubber coating of the All-in-One cable as indicated in the figure on the right. Please use enough silicone gel to fill in the hose and wrap around each wires; otherwise, waterproof function cannot be guaranteed.

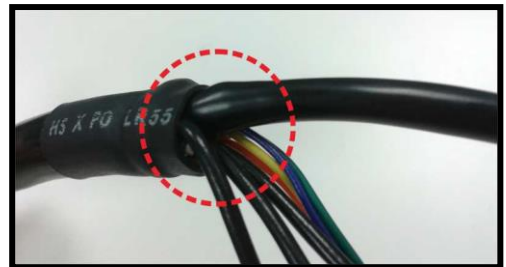

## 3. Installation

Please read the instructions provided in this chapter thoroughly before installing the camera.




**NOTE:** This camera must be installed by qualified personnel and the installation should conform to all local codes.

### 3.1 Ceiling / Wall Mounting


The camera can be installed directly on a wall or ceiling with the integrated adjustable Bracket Mount. Please note that the wall or ceiling must have enough strength to support the camera. Follow the steps below to install the camera.

#### Step 1:


Place the camera at the installation location. On the ceiling / wall, mark the position of the two screw holes of the camera.

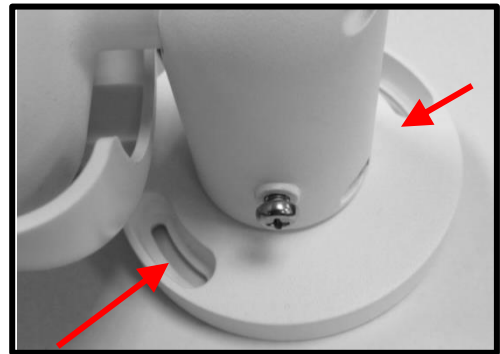

If the screw holes are blocked by the camera body, loosen the two screws shown in **Figure 1** and **Figure 2**, but do not detach it. Then rotate the camera body to reach the screw holes.

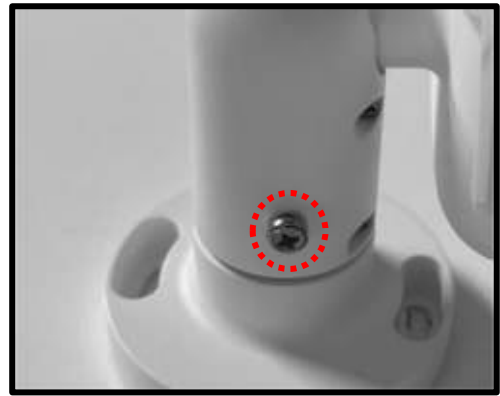

**Figure 1**

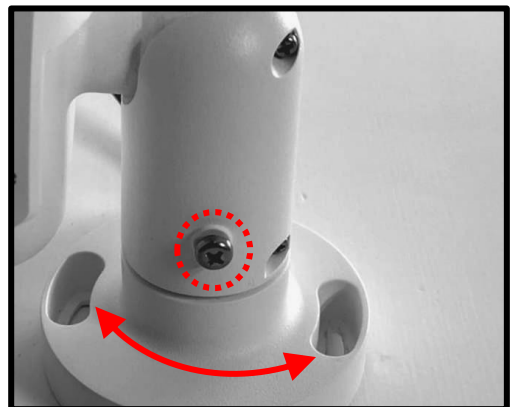

**Figure 2**

**Step 2:**

At the center of the two marked holes, drill a 30 mm diameter (radius as 15 mm) cable entry hole. Then drill a hole slightly smaller than the supplied plastic screw anchor on each marked screw hole.

**Step 3:**


Thread the All-in-One cable of the camera through the cable entry hole. Refer to chapter Camera Cabling for cable connections.

**Step 4:**

Match the two screw holes of the camera with the plastic screw anchors at the installation location. Insert the plastic screw anchors into the two drilled holes, and then fasten the camera with the supplied M4x31 self-tapping screws.


**Step 5:**

Use a cross screwdriver to loosen the screw on one side of the camera indicated in **Figure 1** but do not detach it. Then, loosen the screws on the other side of the camera in **Figure 2**.

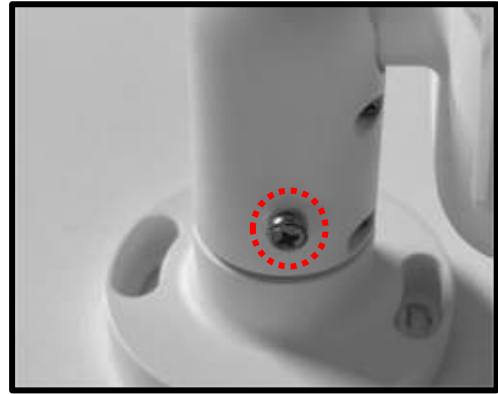

**Figure 1**

After loosening the two screws, rotate the camera and point the camera to a desired direction. Then, tighten the screw. The camera joint will be fixed.

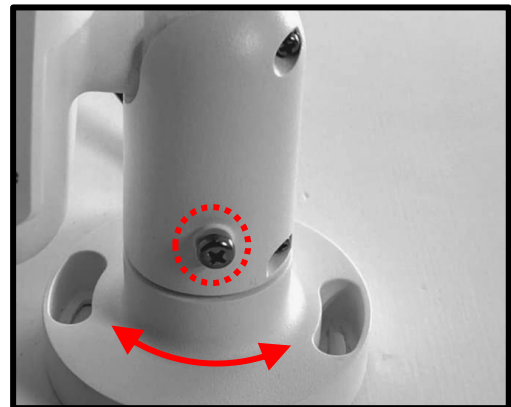

**Figure 2**

## 4. System Requirements

To perform the camera via web browser, please ensure the PC is in good network connection, and meet system requirements as described below.

Items	System Requirement
<b>Personal Computer</b>	<b>Minimum :</b> 1. Intel® Core™ i5-2430M @ 2.4 GHz 2. 4 GB RAM
	<b>Recommended :</b> 1. Intel® Core™ i7-3770 @ 3.4 GHz 2. 8 GB RAM
<b>Operating System</b>	Windows 7 or later operating system
<b>Web Browser</b>	Microsoft Internet Explorer 11.0 (recommended) Chrome Firefox Safari
<b>Network Card</b>	10Base-T (10 Mbps), 100Base-TX (100 Mbps) or 1000Base-T (1000 Mbps) operation
<b>Viewer</b>	ActiveX control plug-in for Microsoft IE



**NOTE:** The ITE is to be connected only to PoE networks without routing to the outside plant or equivalent description.

## 5. Access Camera

For initial access to the IP camera, users can search the camera through the installer program: DeviceSearch.exe.

### **Accessing the Camera by Device Search Software**

- Step 1:** Double click on the program Device Search.exe.
- Step 2:** After its window appears, click on the <Device Search> button on the top. All the finding IP devices will be listed in the page.
- Step 3:** Find the camera in the list by its IP address and click on it. The default IP address of the camera is: **192.168.0.250**.
- Step 4:** The default IP address of the camera may not be in the same LAN as the IP address of the PC. If so, the IP address of the camera needs to be changed. Right click on the camera and click <Network Setup>. Meanwhile, record the MAC address of the camera, for future identification.
- Step 5:** The <Network Setup> page will come out. Select <DHCP> and click <Apply> down the page. The camera will be assigned with a new IP address.
- Step 6:** Click <OK> on the Note of setting change. Wait for one minute to re-search the camera.
- Step 7:** Click on the <Device Search> button to re-search all the devices. Find the camera in the list by its MAC address. Then double click or right click and select <Browse> to access the camera directly via a web browser.

**Step 8:** A prompt window requesting for default username and password will appear. Enter the default username and password shown below to login to the camera.

Login ID	Password
Admin	1234



**NOTE:** ID and password are case sensitive.



**NOTE:** It is strongly advised that administrator's password be altered for the security concerns. Refer to the [U2 H.265 DNN IP Camera Menu Tree](#) for further details.

### **Installing DCViewer Software Online**

For the initial access to the camera, a client program, DCViewer, will be automatically installed to the PC when connecting to the camera.

If the web browser doesn't allow DCViewer installation, please check the Internet security settings or ActiveX controls and plug-ins settings (refer to section [Setup Internet Security](#)) to continue the process.

The Information Bar (just below the URL bar) may come out and ask for permission to install the ActiveX Control for displaying video in browser. Right click on the Information Bar and select <Install ActiveX Control...> to allow the installation.

The download procedure of DCViewer software is specified as follows.

**Step 1:** In the DCViewer installation window, click on <Next> to start installation.

**Step 2:** The status bar will show the installation progress. After the installation is completed, click on <Finish> to exit the installation process.

**Step 3:** Click on <Finish> to close the DCViewer installation page.



Once the Viewer is successfully installed, the Home page of the IP camera will be displayed as the figure below.

### Motorized Lens Models

**Network Camera** Home System Streaming Camera Logout English

Stream 1 Video Format Selection Live Video Pane Time Display 2010/09/29 03:29

**ZOOM** WIDE TELE  1 step RESET → Zoom Adjustment

**FOCUS** NEAR FAR  1 step RESET → Manual Focus Adjustment

**AF MODE** MANUAL ZM TRIG PUSH AF → Auto Focus Adjustment

Stream 1 : H264 bitrate	6144 kbps	low compression, high quality
Stream 2 : H264 bitrate	4096 kbps	
Stream 3 : H264 bitrate	2048 kbps	middle compression, middle quality
Stream 4 : H264 bitrate	2048 kbps	middle compression, middle quality

Video Compression Info

Video Quality Info Button  
Full Screen Button  
Talk Button  
Listen Button  
Snapshot Button  
Live View Pause Button  
Video Record Button  
Manual Trigger Button

### Zoom and Focus Adjustment

The live image will be displayed on the Home page when the camera is successfully accessed. If zoom or focus is not at the desired position, please use the function buttons on the Home page to adjust zoom and focus.



**NOTE:** Please refer to the [U2 H.265 DNN IP Camera Menu Tree](#) for more button function details.

## 6. Setup Video Resolution

Users can setup video resolution on Video Configuration page of the user-friendly browser-based configuration interface.

Video Configuration can be found under: **Streaming > Video Configuration**.

The screenshot shows the 'Network Camera' configuration interface. The top navigation bar includes 'Home', 'System', 'Streaming' (highlighted in red), 'Camera', and 'Logout'. A language dropdown is set to 'English'. On the left, a sidebar menu lists 'Video Configuration' (highlighted in red), 'Video Rotation', 'Video Text Overlay', 'Video ROI', 'Video ROI Encoding', 'Video OCX Protocol', 'Video Mask', and 'Audio'. The main content area is titled 'Video Configuration' and contains settings for four streams and BNC support.

Stream	Encoding	Encode Type	Resolution	Rate Control	Profile	Framerate	Bitrate	GOV Length
stream 1	Yes	H.264	3840 x 2160	VBR	Main profile	25	12288	25
stream 2	Yes	H.264	1920 x 1080	VBR	Main profile	25	4096	25
stream 3	No							
stream 4	No							
BNC Support	No							

Buttons: Save, Reset

The default values of video resolution are as below.

<b>8M</b>	H.265/H.264- 3840 × 2160 (30/25 fps) +
	H.265/H.264- 1920 × 1080 (30/25 fps)

## 7. Configuration Files Export / Import

To export / import configuration files, users can access the Maintenance page on the user-friendly browser-based configuration interface.

The Maintenance setting can be found under this path: **System> Maintenance**.

Users can export configuration files to a specified location and retrieve data by uploading an existing configuration file to the camera. It is especially convenient to make multiple cameras having the same configuration.

### **Export**

Users can save the system settings by exporting the configuration file (.bin) to a specified location for future use. Click on the <Export> button, and the popup File Download window will come out. Click on <Save> and specify a desired location for saving the configuration file.

### **Upload**

To upload an existing configuration file to the camera, please first click on <Browse> to select the configuration file, and then click on the <Upload> button for uploading.

## 8. Tech Support Information

This chapter will introduce how to delete previously-installed DCViewer in the PC and how to setup the Internet security.

### 8.1 Delete the Existing DCViewer

For users who have installed the DCViewer in the PC previously, please first remove the existing DCViewer from the PC before accessing to the IP camera.

#### **Deleting the DCViewer**

In the Windows <Start Menu>, activate <Control Panel>, and then double click on <Add or Remove Programs>. In the <Currently installed programs> list, select <DCViewer> and click on the button <Remove> to uninstall the existing DCViewer.

#### **Deleting Temporary Internet Files**

To improve browser performance, it is suggested to clean up all the files in the <Temporary Internet Files>. The procedure is as follows.

**Step 1:** Click on the <Tools> tab on the menu bar and select <Internet Options>.

**Step 2:** Click on the <Delete> button under <Browsing history> section.

**Step 3:** In the appeared window, tick the box beside <Temporary Internet files> and click on <Delete> to start deleting the files.

## 8.2 Setup Internet Security

If ActiveX control installation is blocked, please either set Internet security level to default or change ActiveX controls and plug-ins settings.

### **Internet Security Level: Default**

**Step 1:** Start the Internet Explorer (IE).

**Step 2:** Click on the <Tools> tab on the menu bar and select <Internet Options>.

**Step 3:** Click on the <Security> tab, and select <Internet> zone.

**Step 4:** Down the page, click on the <Default Level> button and click on <OK> to confirm the setting. Close the browser window, and restart a new one later to access the IP camera.

### **ActiveX Controls and Plug-ins Settings**

**Step 1:** Repeat **Step 1 to Step 3** of the previous section above.

**Step 2:** Down the page, click on the <Custom Level> button to change ActiveX controls and plug-ins settings. The Security Settings window will pop up.

**Step 3:** Under <ActiveX controls and plug-ins>, set **ALL** items (as listed below) to <Enable> or <Prompt>. Please note that the items vary by IE version.

#### **ActiveX controls and plug-ins settings:**

1. Binary and script behaviors.
2. Download signed ActiveX controls.
3. Download unsigned ActiveX controls.
4. Allow previously unused ActiveX controls to run without prompt.
5. Allow Scriptlets.
6. Automatic prompting for ActiveX controls.
7. Initialize and script ActiveX controls not marked as safe for scripting.
8. Run ActiveX controls and plug-ins.
9. Only allow approved domains to use ActiveX without prompt.
10. Script ActiveX controls marked safe for scripting\*.
11. Display video and animation on a webpage that does not use external media player.

**Step 4:** Click on <OK> to accept the settings. A prompt window will appear for confirming the setting changes, click <Yes(Y)> to close the Security Setting window.

**Step 5:** Click on <OK> to close the Internet Options screen.

**Step 6:** Close the browser window, and restart a new one later to access the IP camera.